

STYLE STARTS WITH WHAT'S INSIDE.

NEURO™ DRY IS CRAFTED FROM INDUSTRIAL-GRADE COMPONENTS UNDER RIGOROUS QUALITY CONTROL. **CREATIVE VISION, POWERED BY CUTTING-EDGE TECHNOLOGY: THAT'S INTELLIGENT STYLING.**

ANATOMY OF INTELLIGENT STYLING

- Professional, long-lasting AC motor
- 1875 watts of power
- Tourmaline ions dry hair quickly and gently from the inside out, reducing frizz and adding shine
- SmartSense filter with world's first "Clean Filter" indicator light
- LCD display shows heat and power settings
- 4 heat settings and cool shot button
- Designed flat, so dryer can sit upright
- Protective rubber coating
- Flush power buttons for ergonomics and easy handling
- Concentrator nozzle for directional airflow and controlled styling
- Collapsible silicon diffuser is compact in design and universally fits most dryers
- 2 year warranty

INTELLIGENT STYLING TIPS

- 1 Begin with freshly washed hair, and towel dry to remove excess moisture
- 2 Apply to hair either Paul Mitchell® Fast Form® Cream Gel for a smooth and shiny blow-out, or Thicken Up® Styling Liquid for major body and volume
- 3 Section the hair into 4 equal parts using Paul Mitchell® ProClips
- 4 Starting at the nape of the neck, use the Paul Mitchell® Express Ion Round® brush (any size) to wrap a section of hair
- 5 For added volume, begin section by pointing the nozzle upward at the roots and blow-drying for added lift
- 6 Pull the brush through the section as you continue to blow-dry, pointing the nozzle downward onto hair to eliminate frizz and add shine
- 7 As you pull the brush through the hair, follow it with the dryer to evenly distribute the heat for a fast dry
- 8 When you reach the end of the hair, either turn the brush inward or outward depending on the style
- 9 Lock in style by pressing the cool shot button
- 10 Continue through all sections until hair is completely dry and styled

FOR CURLY HAIR TYPES

- Attach the silicon collapsible diffuser
- Begin by drying the hair at a low heat and speed at the roots using circular motions, always moving in the same direction
- Finish by increasing the heat and gathering sections of hair into the diffuser for gentle drying and styling
- For maximum volume, point the dryer at the roots
- To set the style, release a cool shot of air



For best results, use with **Thicken Up®** Styling Liquid for volume or **Fast Form®** Cream Gel for a smooth style.

Treat yourself to award-winning, luxury hair care at an affordable price. paulmitchell.com



For styling tips scan here

OPERATING INSTRUCTIONS




On / Off Button



Increase Button



Decrease Button

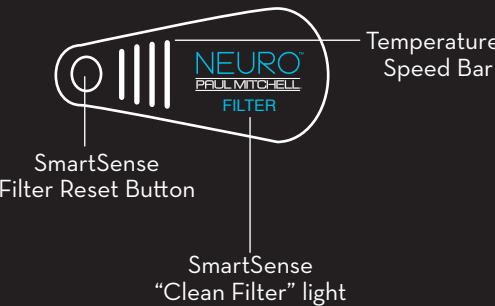

PRESS THE POWER BUTTON to turn on the hair dryer. The temperature/speed bar, logo, and "Clean Filter" will light up.

USE ↑ AND ↓ BUTTONS TO:

- Increase the temperature and airflow
- Decrease the temperature and airflow

PRESS THE COOL SHOT BUTTON to release cool air. Release the cool shot button to return to heating.

SMARTSENSE "CLEAN FILTER" LIGHT

After 100 hours of use, the SmartSense "Clean Filter" light will begin to blink to alert you to wash and clean the filter (**thoroughly wash filter with warm water and air dry**). Press the reset button for approximately 5 seconds to reset the filter button and reset for another 100 hours. The "Clean Filter" light will stop blinking once reset.

PRESS THE POWER BUTTON to turn off the hair dryer.

UPGRADE TO
2YR
Warranty

Receipt required to redeem warranty service. Staple here.

Un reçu est exigé pour pouvoir bénéficier d'un service sous de garantie. L'agrafer ici.
PROLONGER LA GARANTIE À 2 ANS.

Se necesita el recibo para obtener el servicio de garantía. Grápelo aquí.
MEJORA A GARANTÍA DE 2 AÑOS.

REGISTER YOUR TOOL AT WWW.PAULMITCHELL.COM/REGISTER

Please call 1-888-522-8622 or e-mail us at pmprototools@paulmitchell.com before returning any Paul Mitchell® Pro Tools™ appliance.

MAIL ALL RETURNS TO:

Paul Mitchell® Pro Tools™ Warranty Center
357 Mill Road, Staten Island, NY 10306 U.S.A.

Guaranteed only when sold by a professional hairdresser, otherwise it may be counterfeit, black market, old or tampered with. NOT guaranteed when sold by a drugstore, supermarket or other unauthorized source.

ENREGISTREZ VOTRE OUTIL SUR WWW.PAULMITCHELL.COM/REGISTER

Veuillez appeler le 1-888-522-8622 ou nous envoyer un e-mail à pmprototools@paulmitchell.com avant de retourner tout appareil Paul Mitchell® Pro Tools™.

ADRESSEZ TOUS LES RETOURS A:

Paul Mitchell® Pro Tools™ Warranty Center
357 Mill Road, Staten Island, NY 10306 U.S.A.

Ce produit n'est garanti que lorsqu'il est vendu par un professionnel de la coiffure, sinon il peut être contrefait, issu du marché noir, vieux ou altéré. Ce produit n'est PAS garanti lorsqu'il est vendu dans un drugstore, un supermarché, ou une source non autorisée.

REGISTRE SU PRODUCTO EN WWW.PAULMITCHELL.COM/REGISTER

Llame al 1-888-522-8622 o envíenos un mensaje de correo electrónico a pmprototools@paulmitchell.com antes de devolver cualquier aparato Paul Mitchell® Pro Tools™.

ENVÍE TODAS LAS DEVOLUCIONES A:

Paul Mitchell® Pro Tools™ Warranty Center
357 Mill Road, Staten Island, NY 10306 U.S.A.

Garantizado sólo si lo vende un peluquero profesional. De otra manera podría ser falsificado, viejo o alterado. NO garantizado cuando sea vendido en droguerías, supermercados o locales no autorizados para ello.

Distributed by
JOHN PAUL MITCHELL SYSTEMS
(USA) P.O. Box 10597, Beverly Hills, CA 90213-3597
Made in China.
paulmitchell.com

IMPORTANT SAFETY INSTRUCTIONS

When using electric appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

KEEP AWAY FROM WATER.

DANGER –

As with most electric appliances, electrical parts are electrically live even when switch is off.

To reduce the risk of death by electric shock:

1. Always unplug it immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. If an appliance falls into water, unplug it immediately. Do not reach into the water.

WARNING –

To reduce the risk of burns, electrocution, fire or injury to persons:

- Use the dryer only for the purpose described in this guide to prevent accidents, misuse, damage or malfunction.
- Use this appliance only for its intended use as described in this manual.
- This appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
- Do not use attachment not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly or it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and repair.
- Plug the dryer into an electrical outlet of AC 125V/60Hz.

- KEEP AWAY FROM WATER to prevent fire, electric shock, damage or malfunction.
- KEEP AWAY FROM CHILDREN.
- Do not handle the dryer or cord with wet hands as this may cause electric shock, personal injury and/or property damage.

- Plug the dryer into an electrical outlet of AC 125V/60Hz.

- KEEP AWAY FROM WATER to prevent fire, electric shock, damage or malfunction.
- KEEP AWAY FROM CHILDREN.

- Do not handle the dryer or cord with wet hands as this may cause electric shock, personal injury and/or property damage.
- Keep the cord away from heated surfaces.

- DO NOT WRAP THE CORD AROUND THE DRYER. Allow the cord to hang loose and straight at the point of entry into the dryer.
- Never drop or insert objects into any of the dryer openings.

- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- DO NOT USE WHEN CORD HAS BEEN DAMAGED OR IF PLUG IS LOOSE.

- DO NOT REPAIR, TAMPER WITH, OR TRY TO RECONSTRUCT the dryer or electric shock, personal injury, property damage, malfunction or accidents may result.

- When inserting or pulling out the plug, hold the plug firmly to prevent the cord from peeling and to prevent accidents, misuse, personal injury, property damage or malfunction.

- Stop using immediately if you smell an offensive odor. If ignored, it could cause a fire or other accidents.

- Do not keep the dryer in a damp place, such as a bathroom, or it may malfunction.

- Stop using the dryer and remove from the power source when there is an earthquake or thunder.

- Unplug the dryer from the power source when cleaning or wiping to prevent fire or electric shock.

- Never block the air openings of the dryer or place it on a soft surface, such as a bed or couch, where the air openings may be blocked.

- Keep the air openings free of lint, hair, etc.

- Never use while sleeping

- Never drop or insert any object into any opening or hose.

- Do not use an extension cord with this appliance.

- Avoid multiple cables to a plug.

SAVE THESE INSTRUCTIONS.

- Do not direct hot air toward eyes or other heat sensitive areas.
- Attachments may be hot during use. Allow them to cool before handling.

- Do not place the dryer on any surface while it is operating.

- While using the appliance, keep your hair away from the air inlets.

- Do not operate with a voltage converter.

THE ALCI PLUG

This appliance is equipped with ALCI (appliance leakage current interrupter) safety device specifically engineered for safety. ALCI plug is intended to interrupt its load circuit when there is an electrical fault to the appliance. It is for household use and may be plugged into a standard AC electrical outlet (ordinary household current). The ALCI safety device in this unit is built into the plug. This device will make it inoperable under some abnormal conditions, such as accidental immersion in water. If the appliance is immersed in water, do not attempt to reset the ALCI safety device.

The ALCI safety device is equipped with a test button so that its operation can be checked.

TO TEST

1. Press the Reset button on the ALCI safety device.
2. Plug your blow dryer into an AC outlet then press the Test button.
3. The Reset button will pop out. This verifies the safety device is operating properly. If the Reset button does not pop out, do not use the unit. Return it immediately for service.
4. Press the Reset button to reactivate the ALCI safety device. Your blow dryer is ready for use. Repeat this procedure every time you use the blow dryer to confirm that the safety device is operating properly.

SPECIAL ATTENTION

If the unit detects an electrical shock hazard, it will immediately shut off. To restore power, press the Reset button on the ALCI safety device to reactivate the circuit.

Test the ALCI plug before each use as noted:

1. Press Test button
2. Reset button will pop up. If it doesn't, do not use appliance
3. Press Reset button to test for power.

If the ALCI plug is damaged, it must be replaced by the manufacturer or its service agent, in order to avoid a hazard.

MAINTENANCE

Daily Maintenance: For the safe use of the dryer, check the following daily:

- Check the cord and surface of the cord. Never use if any parts are cracked, split, torn or damaged.
- Check the plug and never use if it is cracked, split or damaged.
- Check the plug pins and never use if transformed or damaged.
- Check the controller and do not use if cracked, split, broken or damaged.
- When not in use, clean and dry the entire dryer and store in a cool, dry place.

When ready to use, follow the directions for daily maintenance.

Routine Cleaning: To keep dryer clean, unplug the dryer from the power source, and once the dryer is cool, check to see if filter is dirty. Clean filter often for optimal performance and longevity.

WARNING: Do not wipe the dryer with thinner, benzene, gasoline, lamp oil, and other solvents or chemicals, as that may cause accidents or malfunction and may damage the dryer and void the warranty.

Defects and Malfunction:

- Read all contents of the warranty completely and carefully before contacting the salon, the distributor, or our Paul Mitchell® Pro Tools™ Warranty Center.
- John Paul Mitchell Systems® is not responsible for damage caused by misuse or due to operator accidents, such as dropping the appliance on the floor.

WARRANTY GUIDE

IMPORTANT: Warranty valid only when appliance is purchased from an authorized PAUL MITCHELL® salon or distributor. Terms and conditions may vary depending on salon/authorized retailer's individual exchange or return policy.

LIMITED 12 MONTH WARRANTY

Our 12 month warranty covers tools within the U.S. (Alaska, Hawaii, Puerto Rico and Continental U.S.) and Canada only, and only when purchased from an authorized PAUL MITCHELL® salon or distributor.

The Paul Mitchell® Pro Tools™ warranty covers the appliance against defects in material or workmanship for 12 months from date of purchase. Sorry, no refunds will be given.

1. WITH PROOF OF PURCHASE AND WITHIN 12 MONTHS

Exchange or repair of defective appliance is at Paul Mitchell's discretion. If your Paul Mitchell® Pro Tools™ appliance fails to operate properly within the 12 month warranty period, consumers can return the dryer to the salon where it was purchased (terms and conditions may vary depending on salon/authorized retailer's individual exchange or return policy) and stylists can return it to their distributor, making sure to bring the original proof of purchase.

Otherwise, you may send your appliance, postage paid, along with completed Warranty/Repair Request, your proof of purchase and money order or credit card information for \$14.00 (USD) payable to Paul Mitchell® Pro Tools™ Warranty Center to cover repair, shipping, handling and insurance back to you. However, if the defective appliance is being returned from Alaska, Hawaii, Puerto Rico or Canada, make sure to call our Help Line at 1-888-522-8622 before sending anything. Sorry, checks are not accepted.

If tool is registered, 12 months is automatically extended to 24 months.

2. WITH PROOF OF PURCHASE AND AFTER 12 MONTHS

If your Paul Mitchell® Pro Tools™ appliance fails after the 12 month warranty period, you can still have your appliance repaired. From the Continental U.S., send the appliance, postage paid, along with the completed Warranty/Repair Request, your proof of purchase and money order or credit card information for \$35.00 (USD) payable to Paul Mitchell® Pro Tools™ Warranty Center to cover repair, shipping, handling and insurance back to you. However, if the defective appliance is being returned from Alaska, Hawaii, Puerto Rico or Canada, make sure to call our Help Line at 1-888-522-8622 before sending anything. Sorry, checks are not accepted.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE 12 MONTH DURATION OF THIS WRITTEN LIMITED WARRANTY.

IN NO EVENT SHALL JOHN PAUL MITCHELL SYSTEMS® BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights, which may vary from state to state both in the USA and Canada.

If tool is registered, 12 months is automatically extended to 24 months.


THIS WARRANTY DOES NOT COVER

Normal wear and tear, which includes, but is not limited to, housing scratches, shorts or cuts in the power supply cord or plug. Damage due to misuse and abuse such as: Dropping, wrong voltage supply, neglecting safety precautions. Tampering, such as repair or attempted repair by unauthorized party. Neglect or lack of proper maintenance. Damage to cord: Do not wrap the cord around the dryer as it can result in the cord breaking.

PLEASE BE ADVISED THAT IMPROPER USE OR MAINTENANCE OF YOUR APPLIANCE CAN RESULT IN DAMAGE TO PROPERTY OR PERSONAL INJURY INCLUDING GREAT BODILY HARM. IT IS IMPORTANT TO FOLLOW THE INSTRUCTIONS. FAILURE TO DO SO CAN VOID THIS WARRANTY.

GENERAL SPECIFICATIONS

Model: NDNA
Rated Voltage: 125V
Frequency (Hz): 60Hz
Rated Wattage: 1875W
Length of A.C. Cord: 9 ft., 2.7 m
Weight: 680 g, 24 oz.

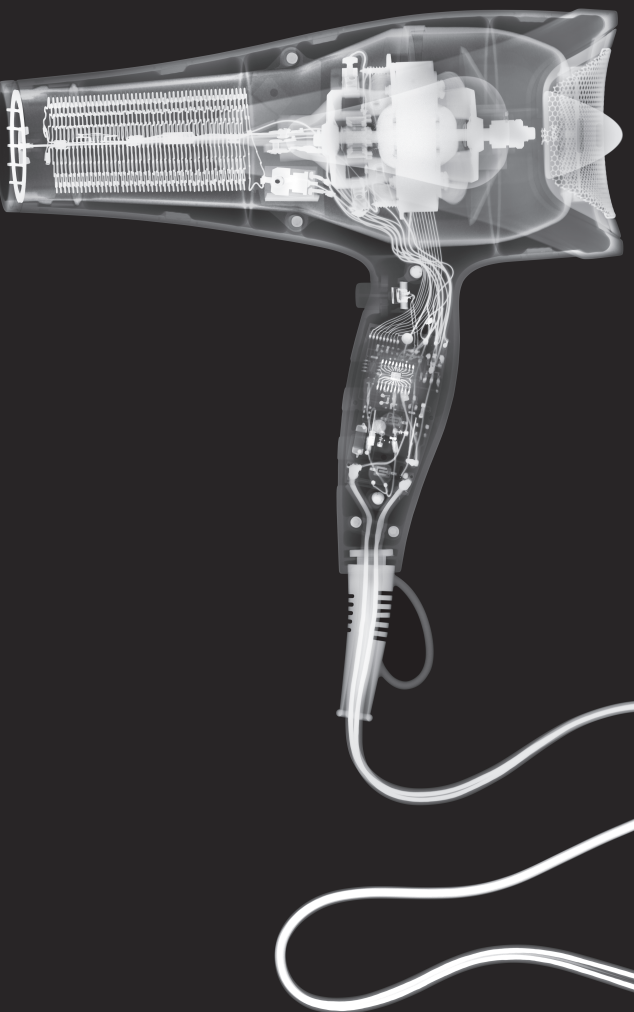

PAUL MITCHELL
NEURO™ DRY
INTELLIGENT STYLING

GUIDE D'UTILISATION • GUÍA DEL USUARIO