WHAT'S

ANATOMY OF

INTELLIGENT STYLING

• Heats up to 450°F in seconds

Premium IsoTherm titanium rod

 9-foot swivel cord with hanging loop Dual voltage for worldwide use

· Customizable auto shut-off

• SmartSense microchip for lightning-fast heat recovery

NEURO® GUIDE IS CRAFTED FROM INDUSTRIAL-GRADE COMPONENTS UNDER RIGOROUS QUALITY CONTROL. CREATIVE VISION, POWERED BY **CUTTING-EDGE TECHNOLOGY:** THAT'S INTELLIGENT STYLING.

INTELLIGENT STYLING TIPS

- 1 Apply Neuro[™] Protect HeatCTRL[®] Iron Hairspray to dry hair for thermal protection.
- **2** Determine where you want the curls to start. If you want curls from scalp to ends, place the base of the iron close to the head and begin wrapping the hair around it. If you want to curl half the strand, begin wrapping at mid-length.
- **3** Wrap the hair OVER the iron for more wave. or UNDER the iron for more bounce and lift.
- 4 Wrap larger sections for looser, wavier looks; smaller sections for tighter curls.
- 5 Choose the right Paul Mitchell® Pro Tools™ brush for your desired end result:
- 413 Sculpting Brush for full, bouncy curls
- Teasing Brush for a soft, Hollywood glam look
- Detangler Comb for a free, tousled look
- 6 To set your look, spray hair with Neuro™ Finish -HeatCTRL® Style Spray.

OPERATING INSTRUCTIONS

- 1 Press the power button to light up all buttons, press it again to lock the touch buttons or it will lock itself after 3 seconds without operation. Quickly press to unlock it and hold the power button to turn off the iron.
- 2 Touch "M" to adjust between auto-shut off Time. Centigrade and Fahrenheit: touch "+/-" to increase or decrease while at Time or Temperature settings. To set temperature, touch + and - button to select (160-450F):
- 160-370F for fine hair
- 380-390F for medium hair
- 400-450F for coarse hair/professional use
- Touch Mode button 1x to set auto shut-off time (0-90 mins) and the default is 60 mins
- Touch Mode button 2x to select celsius
- Touch Mode button 3x to return to auto shut-off time
- Touch Mode button 4x to return to main screen
- **3** Before curling, slide the lock/unlock switch down into the unlocked position. The comb will automatically release from the barrel to better grip the hair, preventing it from slipping from around the barrel while also controlling frizzy, unruly textures.

While curling, shift the lever to the left. The comb will retract into the barrel, releasing a snag-free, natural-looking wave.

For styling without the comb, slide the lock/unlock switch up into the locked position. Shift the lever to the left. The comb will retract into the barrel, leaving a styling rod for creating natural-looking curls.







WARNINGS:

- Do not touch comb while rod is turned on.
- Do not manually force the comb in or out of the rod.
- · While in use avoid touching the skin/scalp directly.





REGISTER YOUR TOOL AT WWW.NEUROHAIR.COM/REGISTER

2_{YR}

Warranty

Please call 1-888-522-8622 or email us at support@neurohair.com before returning

Guaranteed ONLY when purchased within the professional beauty salon industry. NOT from a drugstore, supermarket or other unauthorized source

PROLONGER LA GARANTIE À 2 ANS.

WWW.NEUROHAIR.COM/REGISTER

Veuillez appeler le 1-888-522-8622 ou nous envoyer un e-mail à support@neurohair.com avant de retourner tout appareil Neuro®.

La garantie couvre <u>UNIQUEMENT</u> les produits achetés auprès d'un salon de coiffure professionnel et NON PAS les produits achetés dans une pharmacie, un supermarché ou toute autre source non autorisée.

MEJORA A GARANTÍA DE 2 AÑOS.

REGISTRE SU PRODUCTO EN WWW.NEUROHAIR.COM/REGISTER

Llame al 1-888-522-8622 o envíenos un mensaje de correo electrónico a support@neurohair.com antes de devolver cualquier aparato Neuro®.

Garantizado SÓLO cuando se adquiere dentro del sector de salones de belleza profesionales y NO en un supermercado u otro punto de venta

DANGER – Any appliance is electrically live, even when the switch is off. When not in use, always unplug the iron to prevent the risk of fire. WARNING – To reduce the risk of burns, electrocution, fire or injury to persons and/or personal property: Use the iron only for the purpose described in this guide to prevent

READ ALL INSTRUCTIONS BEFORE USING.

accidents, damage or malfunction.

starting a fire from overheating.

Keep the cord away from heated surfaces.

DO NOT WRAP THE CORD AROUND THE IRON.

KEEP AWAY FROM CHILDREN.

any Neuro® appliance.

accidents or malfunction. **ENREGISTREZ VOTRE OUTIL SUR** • Do not operate where oxygen is being administered to avoid the risk of fire.

DO NOT USE WHEN CORD HAS BEEN DAMAGED OR IF PLUG IS LOOSE.

 DO NOT REPAIR, TAMPER WITH, OR TRY TO RECONSTRUCT the iron. otherwise electric shock, malfunction or accidents may result.

This appliance should never be left unattended when plugged in.

Avoid multiple cables to a plug or use of an extension cord to prevent

KEEP AWAY FROM WATER to prevent fire, electric shock, damage or malfunction.

Do not handle the iron or cord with wet hands, as this may cause electric shock.

• Do not leave the iron in a position where it can fall or be pulled into a tub or sink.

• Never place or insert objects on iron barrel, due to the risk of causing fire,

- When inserting or pulling out the plug, hold the plug firmly to prevent the cord from peeling and to prevent accidents or malfunction.
- Stop using immediately if you smell an offensive odor. If ignored, it could cause a fire or other accidents.
- Do not keep the iron in a damp place, such as a bathroom, or it may malfunction
- Stop using the iron and remove from the power source when there is an earthquake or thunder.
- Unplug the iron from the power source when cleaning or wiping to prevent fire or electric shock.

MAINTENANCE

Daily Maintenance: For the safe use of the iron, check the following daily:

- Check the cord and surface of the cord. Never use if any parts are cracked, split, torn or damaged.
- · Check the plug and never use if it is cracked, split or damaged.
- · Check the plug pins and never use if transformed or damaged. • Check the controller and do not use if cracked, split, broken or damaged.

When ready to use, follow the directions for daily maintenance.

• When not in use, clean and dry the entire iron and store in a cool, dry place.

Daily Cleaning: To keep barrel clean, unplug the iron from the power source, and once the iron is cool, wipe down barrel after each use with a hot, damp towel.

WARNING: Do not wipe the iron with thinner, benzene, gasoline, lamp oil, and other solvents or chemicals, as that may cause accidents or malfunction, and may damage the iron and void the warranty.

Defects and Malfunction:

- Read all contents of the warranty completely and carefully before contacting the salon, the distributor or our Paul Mitchell® Pro Tools™ Warranty Center.
- John Paul Mitchell Systems® is not responsible for damage caused by misuse or due to operator accidents, such as dropping the appliance on the floor.

OPERATING INSTRUCTIONS

The iron has reached your selected temperature when the display screen reaches the desired temperature. Once you have finished styling, turn off and unplug the iron. This iron has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit securely, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

IMPORTANT: Warranty valid only when appliance is purchased from an authorized John Paul Mitchell Systems® salon or distributor. Terms and conditions may vary depending on salon/authorized retailer's individual exchange or return policy.

WITH PROOF OF PURCHASE AND WITHIN 12 MONTHS OR 24 MONTHS IF TOOL IS REGISTERED

Exchange of defective appliance is at John Paul Mitchell Systems' discretion. If your Neuro® appliance fails to operate properly within the first 12 months of purchase, or within 24 months of purchase when registered, consumers can return the appliance to the salon where it was purchased (terms and conditions may vary depending on salon/authorized retailer's individual exchange or return policy) and stylists can return it to their distributor, making sure to bring the original proof of purchase. Otherwise, you may send us your appliance, postage paid, along with completed Warranty Request, your proof of purchase, and a money order or credit card information for \$14.00 (USD) payable to Paul Mitchell® Pro Tools™ Warranty Center to cover shipping, handling and insurance back to you. Repair or servicing of defective appliances is not offered. Warranty replacement of Limited Edition appliances is subject to availability; appliances may be replaced with a similar or equal product.

ANY IMPLIED WARRANTIES. OBLIGATIONS OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. SHALL BE LIMITED TO THE 12-MONTH DURATION OF THIS WRITTEN LIMITED WARRANTY.

IN NO EVENT SHALL JOHN PAUL MITCHELL SYSTEMS® BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights, which may vary from state to state both in the USA and Canada.

If tool is registered, 12 months is automatically extended to 24 months.

THIS WARRANTY DOES NOT COVER

Normal wear and tear, which includes, but is not limited to, housing or barrel scratches, and shorts or cuts in the power supply cord or plug. Damage due to misuse and abuse such as: Dropping, wrong voltage supply, neglecting safety precautions. Tampering, such as repair or attempted repair by unauthorized party. Neglect or lack of proper maintenance. Damage to cord: Do not wrap the cord around the iron as it can result in the cord breaking.

PLEASE BE ADVISED THAT IMPROPER USE OR MAINTENANCE OF YOUR APPLIANCE CAN RESULT IN DAMAGE TO PROPERTY OR PERSONAL INJURY. INCLUDING GREAT BODILY HARM. IT IS IMPORTANT TO FOLLOW THE INSTRUCTIONS, FAILURE TO DO SO CAN VOID THIS WARRANTY.

GENERAL SPECIFICATIONS

Model: NGRNAS Rated Voltage: 110-240VAC Frequency (Hz): 50/60Hz Rated Wattage: 63W Length of Cord: 9 ft. / 2,7 m Weight (less cord): 275 g / 9.7 oz. / .61 lbs.





