

STYLE STARTS WITH WHAT'S INSIDE.

NEURO® HALO IS CRAFTED FROM INDUSTRIAL-GRADE COMPONENTS UNDER RIGOROUS QUALITY CONTROL.

CREATIVE VISION, POWERED BY CUTTING-EDGE TECHNOLOGY: THAT'S INTELLIGENT STYLING.

ANATOMY OF INTELLIGENT STYLING

- Professional, long-lasting DC motor
- 1875 watts of power
- Tourmaline ions dry hair quickly and gently from the inside out, reducing frizz and adding shine
- SmartSense filter with world's first "Clean Filter" indicator light
- Backlit touchscreen display to precisely control heat, airflow and ion settings
- 3 heat settings, 3 airflow settings, ion setting and cool shot
- Concentrator nozzle for directional airflow and controlled styling
- Diffuser defines and lifts curls
- 2-year warranty

INTELLIGENT STYLING TIPS


- 1 Begin with freshly washed hair with Neuro™ care products, and towel dry to remove excess moisture.
- 2 Apply Neuro™ Prime HeatCTRL® Blowout Primer and/or Neuro™ Lift HeatCTRL® Volume Foam to hair for a longlasting, full-body blowout.
- 3 Section the hair.
- 4 Starting at the nape of the neck, use the Neuro Round brush to wrap a section of hair.
- 5 For added volume, begin section by pointing the nozzle upward at the roots and blow-drying for added lift.
- 6 Pull the brush through the section as you continue to blow-dry, pointing the nozzle downward onto hair to eliminate frizz and add shine.
- 7 As you pull the brush through the hair, follow it with the dryer to evenly distribute the heat for a fast dry.
- 8 When you reach the end of the hair, either turn the brush inward or outward depending on the style.
- 9 Lock in style by pressing the cool shot button.
- 10 Continue through all sections until hair is completely dry and styled.
- 11 To set your look, spray hair with Neuro™ Finish HeatCTRL® Style Spray.


FOR CURLY HAIR TYPES








- 1 Attach the diffuser.
- 2 Begin by drying the hair at a low heat and speed at the roots using circular motions, always moving in the same direction.
- 3 Finish by increasing the heat and gathering sections of hair into the diffuser for gentle drying and styling.
- 4 For maximum volume, point the dryer at the roots.
- 5 To set the style, release a cool shot of air.





OPERATING INSTRUCTIONS




When you plug in the dryer, the power button  and cool button will dimly illuminate.




1 Press the power button and the NEURO logo  will illuminate, as well as:

-  ion
-  low speed
-  medium speed
-  high speed
-  low heat
-  medium heat
-  high heat

2 Press the cool button , and the light will become bright (cool shot is on). Press it again, and the button will turn back to a dim light (cool shot is off).

3 Touch ; the ion feature will be turned on and the dim light will change to a bright light (ion feature off is the default setting).

4 Touch    to increase or decrease the air speed.

5 Touch    to decrease or increase the temperature.



SMARTSENSE “CLEAN FILTER” LIGHT

After 30 hours of use, the SmartSense “Clean Filter”  light will begin to blink to alert you to wash and clean the filter (**thoroughly wash filter with warm water and air dry**). To Reset press the clean filter icon and it will be reset for another 30 hours. The “Clean Filter”  light will stop blinking once reset.



Power



Ion
On / Off



High
Speed



Medium
Speed



Low
Speed



High
Heat



Medium
Heat



Low
Heat



Clean
Filter



Cool
Shot



**REGISTER YOUR TOOL AT
WWW.NEUROHAIR.COM/REGISTER**

Please call 1-888-522-8622 or email us at support@neurohair.com before returning your Neuro® appliance.

Guaranteed ONLY when purchased within the professional beauty salon industry, NOT from a drugstore, supermarket, or other unauthorized source.

PROLONGER LA GARANTIE À 2 ANS.

**ENREGISTREZ VOTRE OUTIL SUR
WWW.NEUROHAIR.COM/REGISTER**

Veillez appeler le 1-888-522-8622 ou nous envoyer un e-mail à support@neurohair.com avant de retourner tout appareil Neuro®.

La garantie couvre UNIQUEMENT les produits achetés auprès d'un salon de coiffure professionnel et NON PAS les produits achetés dans une pharmacie, un supermarché ou toute autre source non autorisée.

MEJORA A GARANTÍA DE 2 AÑOS.

**REGISTRE SU PRODUCTO EN
WWW.NEUROHAIR.COM/REGISTER**

Llame al 1-888-522-8622 o envíenos un mensaje de correo electrónico a support@neurohair.com antes de devolver cualquier aparato Neuro®.

Garantizado SÓLO cuando se adquiere dentro del sector de salones de belleza profesionales y NO en un supermercado u otro punto de venta no autorizado.

Distributed by

JOHN PAUL MITCHELL SYSTEMS.

(USA) P.O. Box 10597, Beverly Hills, CA 90213-3597

Made in China.

paulmitchell.com

IMPORTANT SAFETY INSTRUCTIONS

When using electric appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

KEEP AWAY FROM WATER.

DANGER –

As with most electric appliances, electrical parts are electrically live even when switch is off.

To reduce the risk of death by electric shock:

1. Always unplug it immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. If an appliance falls into water, unplug it immediately. Do not reach into the water.

WARNING –

To reduce the risk of burns, electrocution, fire or injury to persons:

- Use the dryer only for the purpose described in this guide to prevent accidents, misuse, damage or malfunction.
- Use this appliance only for its intended use as described in this manual.
- This appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
- Do not use attachment not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly or it has been dropped, damaged or dropped into water. Return the appliance to a service center for examination and repair.
- Plug the dryer into an electrical outlet of AC 125V/60Hz.
- KEEP AWAY FROM WATER to prevent fire, electric shock, damage or malfunction.
- KEEP AWAY FROM CHILDREN.
- Do not handle the dryer or cord with wet hands, as this may cause electric shock, personal injury and/or property damage.
- Keep the cord away from heated surfaces.
- DO NOT WRAP THE CORD AROUND THE DRYER. Allow the cord to hang loose and straight at the point of entry into the dryer.
- Never drop or insert objects into any of the dryer openings.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- DO NOT USE WHEN CORD HAS BEEN DAMAGED OR IF PLUG IS LOOSE.
- DO NOT REPAIR, TAMPER WITH, OR TRY TO RECONSTRUCT the dryer or electric shock, personal injury, property damage, malfunction or accidents may result.
- When inserting or pulling out the plug, hold the plug firmly to prevent the cord from peeling and to prevent accidents, misuse, personal injury, property damage or malfunction.
- Stop using immediately if you smell an offensive odor. If ignored, it could cause a fire or other accidents.
- Do not keep the dryer in a damp place, such as a bathroom, or it may malfunction.
- Stop using the dryer and remove from the power source when there is an earthquake or thunder.
- Unplug the dryer from the power source when cleaning or wiping to prevent fire or electric shock.
- Never block the air openings of the dryer or place it on a soft surface, such as a bed or couch, where the air openings may be blocked.

- Keep the air openings free of lint, hair, etc.
- Never use while sleeping
- Never drop or insert any object into any opening or hose.
- Do not use an extension cord with this appliance.
- Avoid multiple cables to a plug.

SAVE THESE INSTRUCTIONS.

- Do not direct hot air toward eyes or other heat-sensitive areas.
- Attachments may be hot during use. Allow them to cool before handling.
- Do not place the dryer on any surface while it is operating.
- While using the appliance, keep your hair away from the air inlets.
- Do not operate with a voltage converter.

THE ALCI PLUG

This appliance is equipped with an ALCI (appliance leakage current interrupter) safety device specifically engineered for safety. The ALCI plug is intended to interrupt its load circuit when there is an electrical fault to the appliance. It is for household use and may be plugged into a standard AC electrical outlet (ordinary household current). The ALCI safety device in this unit is built into the plug. This device will make it inoperable under some abnormal conditions, such as accidental immersion in water. If the appliance is immersed in water, do not attempt to reset the ALCI safety device.

The ALCI safety device is equipped with a test button so that its operation can be checked.

TO TEST

1. Press the Reset button on the ALCI safety device.
2. Plug your blow-dryer into an AC outlet, then press the Test button.
3. The Reset button will pop out. This verifies the safety device is operating properly. If the Reset button does not pop out, do not use the unit. Return it immediately for service.
4. Press the Reset button to reactivate the ALCI safety device. Your blow-dryer is ready for use. Repeat this procedure every time you use the blow-dryer to confirm that the safety device is operating properly.

SPECIAL ATTENTION

If the unit detects an electrical shock hazard, it will immediately shut off. To restore power, press the Reset button on the ALCI safety device to reactivate the circuit.

Test the ALCI plug before each use as noted:

1. Press Test button.
2. Reset button will pop up. If it doesn't, do not use appliance.
3. Press Reset button to test for power.

If the ALCI plug is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard.

MAINTENANCE

Daily Maintenance: For the safe use of the dryer, check the following daily:

- Check the cord and surface of the cord. Never use if any parts are cracked, split, torn or damaged.
- Check the plug and never use if it is cracked, split or damaged.
- Check the plug pins and never use if transformed or damaged.
- Check the controller and do not use if cracked, split, broken or damaged.
- When not in use, clean and dry the entire dryer and store in a cool, dry place.

When ready to use, follow the directions for daily maintenance.

Routine Cleaning: To keep dryer clean, unplug the dryer from the power source. Once the dryer is cool, check to see if filter is dirty. Clean filter often for optimal performance and longevity.

WARNING: Do not wipe the dryer with thinner, benzene, gasoline, lamp oil, and other solvents or chemicals, as that may cause accidents or malfunction and may damage the dryer and void the warranty.

Defects and Malfunction:

- Read all contents of the warranty completely and carefully before contacting the salon, the distributor or our Paul Mitchell® Pro Tools™ Warranty Center.
- John Paul Mitchell Systems® is not responsible for damage caused by misuse or due to operator accidents, such as dropping the appliance on the floor.

WARRANTY GUIDE

IMPORTANT: Warranty valid only when appliance is purchased from an authorized John Paul Mitchell Systems® salon or distributor. Terms and conditions may vary depending on salon/authorized retailer's individual exchange or return policy.

WITH PROOF OF PURCHASE AND WITHIN 12 MONTHS OR 24 MONTHS IF TOOL IS REGISTERED

Exchange of defective appliance is at John Paul Mitchell Systems' discretion. If your Neuro® appliance fails to operate properly within the first 12 months of purchase, or within 24 months of purchase when registered, consumers can return the appliance to the salon where it was purchased (terms and conditions may vary depending on salon/authorized retailer's individual exchange or return policy) and stylists can return it to their distributor, making sure to bring the original proof of purchase. Otherwise, you may send us your appliance, postage paid, along with completed Warranty Request, your proof of purchase, and a money order or credit card information for \$14.00 (USD) payable to Paul Mitchell® Pro Tools™ Warranty Center to cover shipping, handling and insurance back to you. Repair or servicing of defective appliances is not offered. Warranty replacement of Limited Edition appliances is subject to availability; appliances may be replaced with a similar or equal product.

ANY IMPLIED WARRANTIES, OBLIGATIONS OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE 12-MONTH DURATION OF THIS WRITTEN LIMITED WARRANTY.

IN NO EVENT SHALL JOHN PAUL MITCHELL SYSTEMS® BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights, which may vary from state to state both in the USA and Canada.

If tool is registered, 12 months is automatically extended to 24 months.

THIS WARRANTY DOES NOT COVER

Normal wear and tear, which includes, but is not limited to housing scratches, shorts or cuts in the power supply cord or plug; damage due to misuse and abuse such as dropping, wrong voltage supply or neglecting safety precautions; tampering, such as repair or attempted repair by unauthorized party; neglect or lack of proper maintenance; damage to cord. Do not wrap the cord around the dryer as it can result in the cord breaking.

PLEASE BE ADVISED THAT IMPROPER USE OR MAINTENANCE OF YOUR APPLIANCE CAN RESULT IN DAMAGE TO PROPERTY OR PERSONAL INJURY, INCLUDING GREAT BODILY HARM. IT IS IMPORTANT TO FOLLOW THE INSTRUCTIONS. FAILURE TO DO SO CAN VOID THIS WARRANTY.

GENERAL SPECIFICATIONS

Model: NHDNAS

Rated Voltage: 125V

Frequency (Hz): 60Hz

Rated Wattage: 1875W

Length of A.C. Cord: 9 ft., 2.7 m

Weight: 610 g, 21 oz. (less cord)



Designed by *fantini*

NEURO[®] HALO

INTELLIGENT STYLING

TOUCHSCREEN DRYER SOFT, FULL BODY & VOLUME

USER GUIDE